



10.TROUBLESHOOTING

When the engine can not be started:

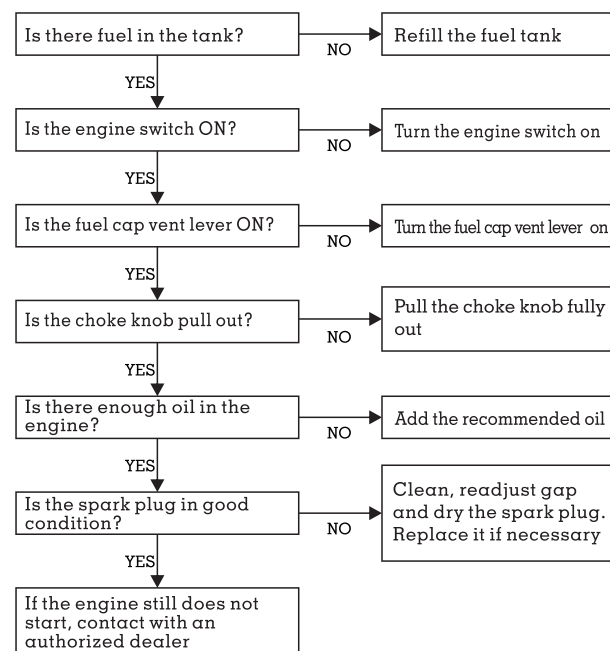

Appliance does not operate :

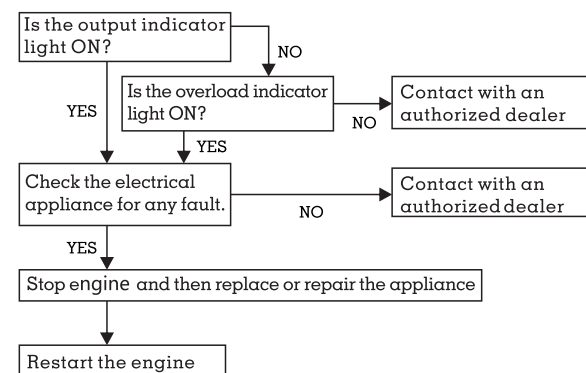

DC receptacle without any electricity :

