


10. TROUBLESHOOTING

Engine not to start:

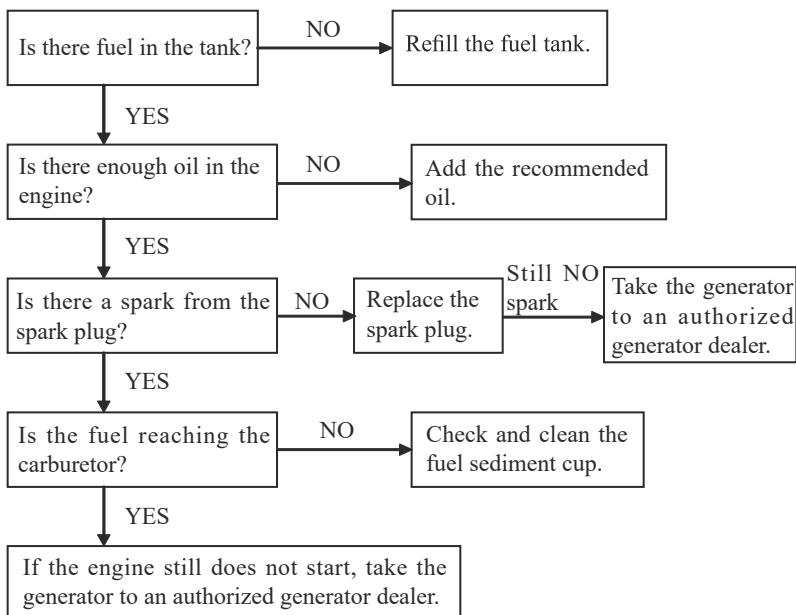

No power supply:

