



CS3800

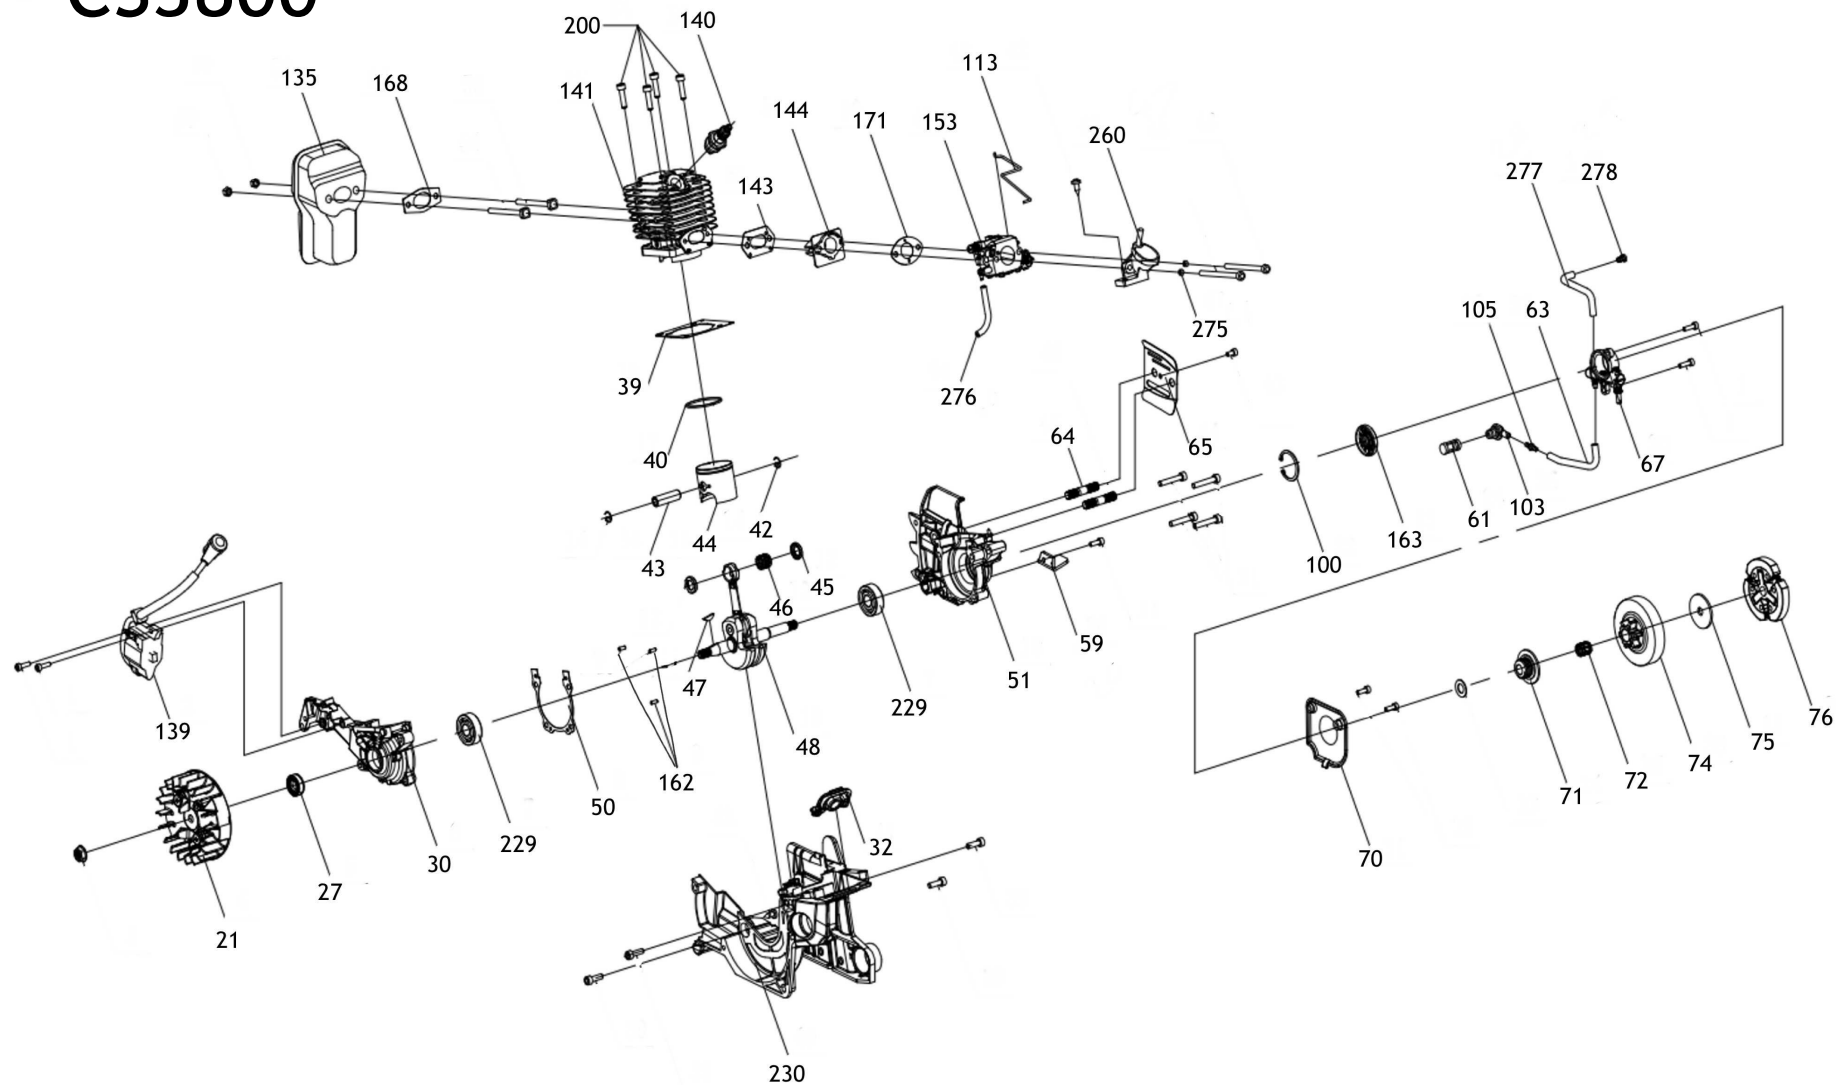

CS3800

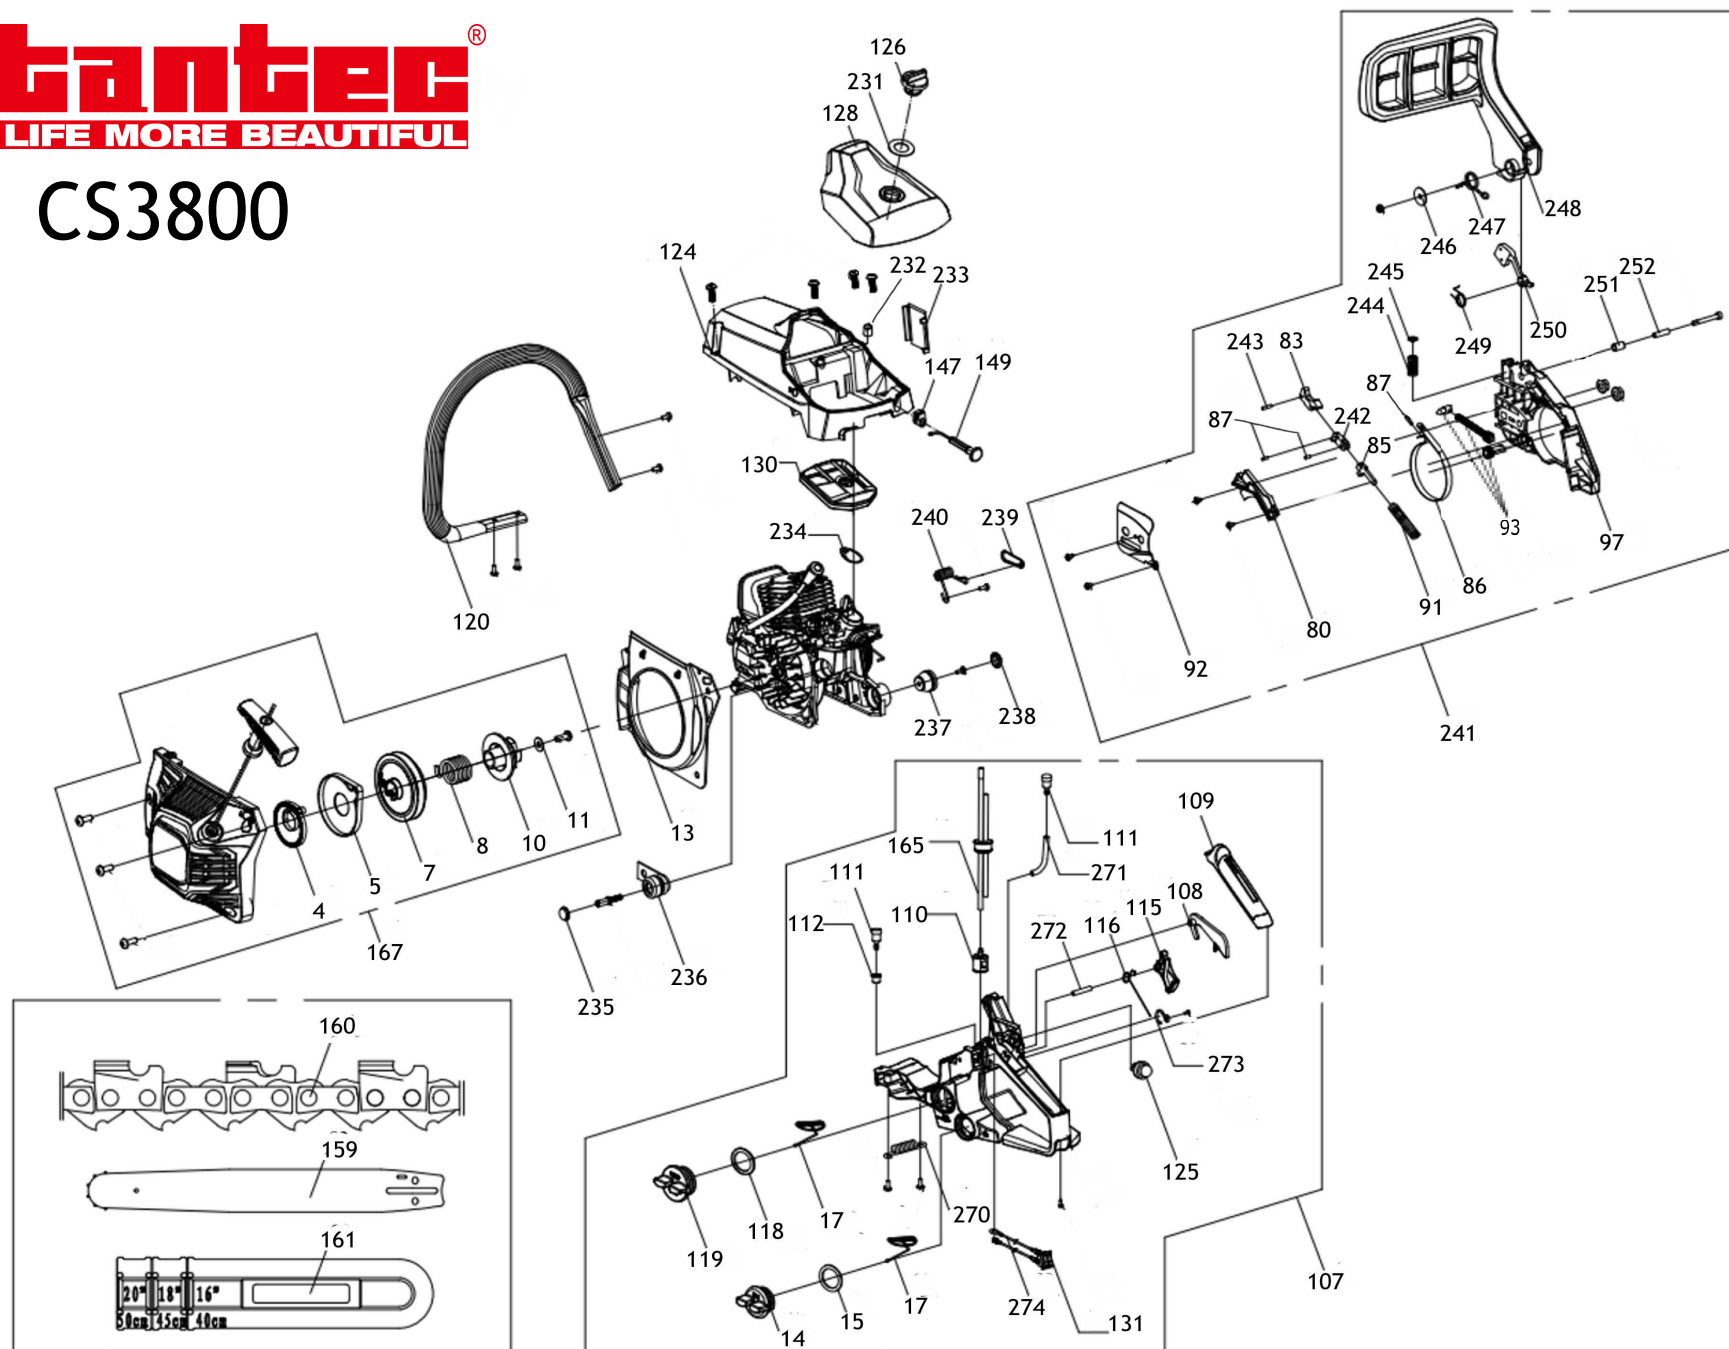

CS3800

Ref	Description	Part number
4	Spring	TT00405
5	Spring box	TT00502
7	Reel	TT00705
8	Torsion Spring	TT00806
10	Ratchet	TT01004
11	Washer	TT01102
13	Shroud	TT01302
14	Oil cap	TT01402
15	Seal oil cap	TT01501
17	Palm oil Cap	TT01702
21	Flywheel	TT02108
27	oil seal 12x22x7	TT02701
30	Left Crankcase	TT03007
32	Dustproof plate	TT03202
39	Gasket, Cylinder	TT03908
40	Piston Ring	TT04008
42	Snap Ring, Piston Pin	TT04201
43	Piston Pin	TT04308
44	Piston	TT04408
45	elastic ring needle bearing	TT04502
46	Needle bearing	TT04608
47	Key 3x10	TT04701
48	Crankshaft	TT04808
50	Gasket, Crankcase	TT05008
51	Right Crankcase	TT05107
59	Guide chain block	TT05901
61	oil filter	TT06102
63	oil tube	TT06302
64	Main spring braker	TT06402
65	Plate injector	TT06502
67	oil pump	TT06702
70	plate oil pump	TT07002
71	worm	TT07102
72	needle bearing	TT07202
74	Drum	TT07402
75	Spacer clutch	TT07502
76	Clutch	TT07606
80	Plate braker spring	TT08003
83	Braker lever	TT08302
85	Brake band connectin rod	TT08502
86	Brake band	TT08603
87	Positioning pin	TT08702
91	main spring braker	TT09102
93	Adjusting screw	TT09303

Ref	Description	Part number
92	Tension cover	TT09202
97	Braker cover	TT09703
100	snap ring 32	TT10002
103	oil filter seat	TT10301
105	hose connector	TT10501
107	Fuel tank	TT10706
108	Trigger control arm	TT10803
109	rear handle cover	TT10902
110	Fuel Filter	TT11001
111	Balancer	TT11104
112	Balancer seat	TT11201
113	Throttle push rod	TT11302
115	Throttle trigger	TT11503
116	Torsion spring trigger	TT11602
118	Seal fuel cap	TT11801
119	Cap fuel filter	TT11901
120	Handle	TT12003
124	Cover, Cylinder	TT12406
125	bubble	TT12501
126	Knob	TT12605
128	Cover Filter	TT12806
130	element	TT13005
131	on/off switch	TT13103
135	muffler	TT13505
139	coil	TT13908
140	spark plug L7T	TT14002
141	cylinder	TT14108
143	gasket inlet pipe	TT14305
144	inlet pipe	TT14406
147	Small damper rod	TT14702
149	Choke rod	TT14902
153	carb	TT15308
159	Guide bar 16"	TT15902
160	chain16"	TT16002
161	Cover guide bar 16"	TT16103
162	Pin 3x8	TT16202
163	oil seal 12x32x5.5	TT16302
165	fuel pipe	TT16503
167	starter assy	TT16705
168	gasket muffler	TT16804
171	gasket carburetor	TT17107
200	Cylinder bolt M5x20	TT20002
229	Bearing 6201	TT22901
230	supporter	TT23001
231	Locknut seal	TT23101



Ref	Description	Part number
232	damper air filter	TT23201
233	anti freeze board	TT23301
234	Ring air filter	TT23401
235	Dustproof cover	TT23501
236	Left Damper	TT23601
237	Right Damper	TT23701
238	Big Dustproof cover	TT23801
239	Spring plate Handle	TT23901
240	Spring handle	TT24001
241	Braker assy	TT24101
242	Sub Lever	TT24201
243	pin 3x14	TT24301
244	spring front guard	TT24401
245	spring seat	TT24501
246	Gasket front guard	TT24601
247	Torsion spring braker	TT24701
248	front guard	TT24801
249	torsion spring hammer	TT24901
250	hammer	TT25001
251	Casing hammer	TT25101
252	Casing front guard	TT25201
260	Intake pipe	TT26001
270	tension spring	TT27002
271	Pipe, balancer	TT27101
272	Pin 5x25	TT27201
273	Spring oil filter seat	TT27301
274	Coil	TT27401
275	Spacer 5x7x7	TT27501
276	Fuel inlet pipe	TT27601
277	Outlet oil pipe	TT27701
278	Oil nozzle	TT27801