


HYUNDAI







POWER PRODUCTS

HPW200

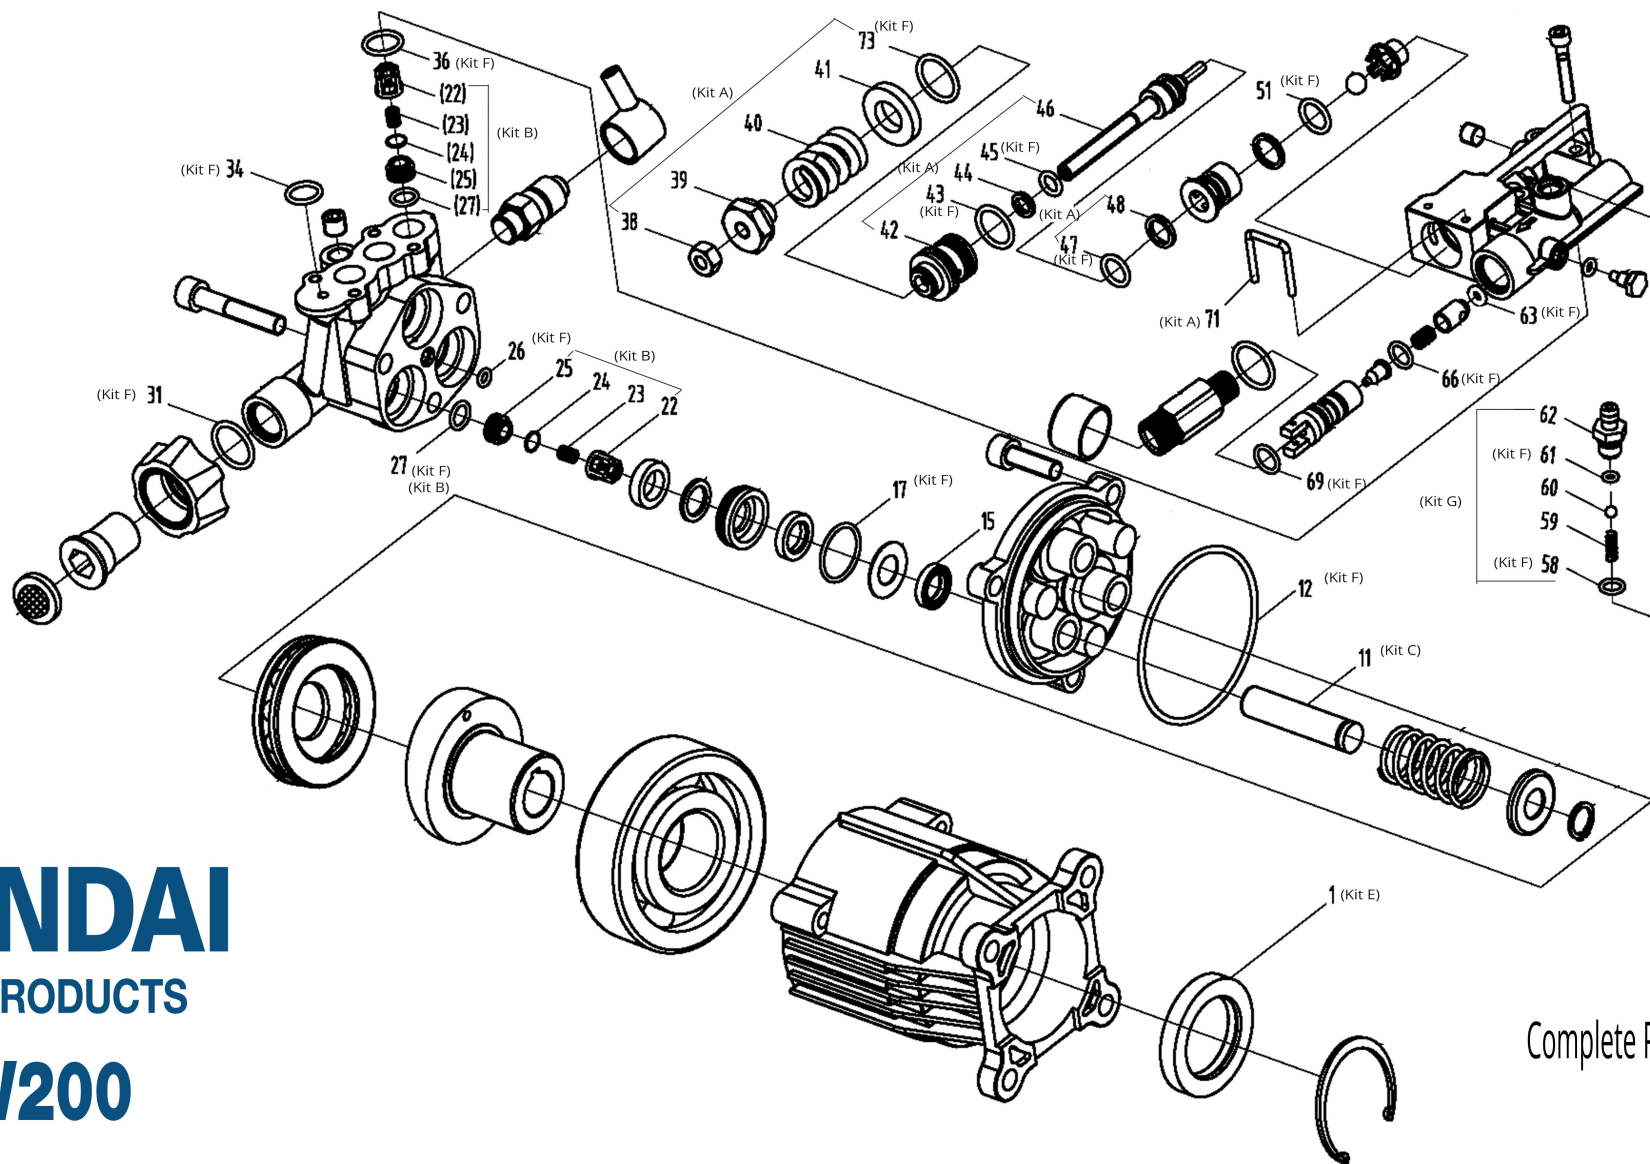

Complete Pump - H

Repair Kits

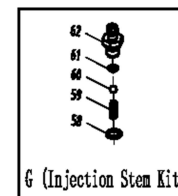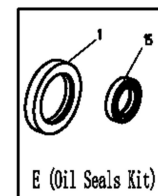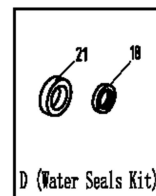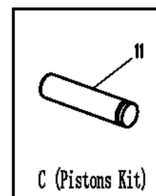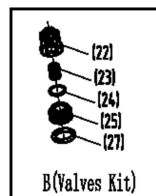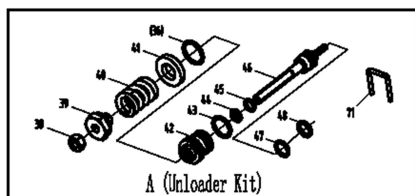

HYUNDAI

POWER PRODUCTS


HPW200

Ref	Description	Part number
A	Unloader Kit	HPRepair Kit A
B	Valve Kit	HPRepair Kit B
C	Piston Kit	HPRepair Kit C
D	Water seal Kit	HPRepair Kit D
E	Oil seal Kit	HPRepair Kit E
G	Injector Stem Kit	HPRepair Kit F
F	O-ring kit	HPRepair Kit G
H	Pump	HP85.170.012-M22M

HYUNDAI

POWER PRODUCTS

HPW200

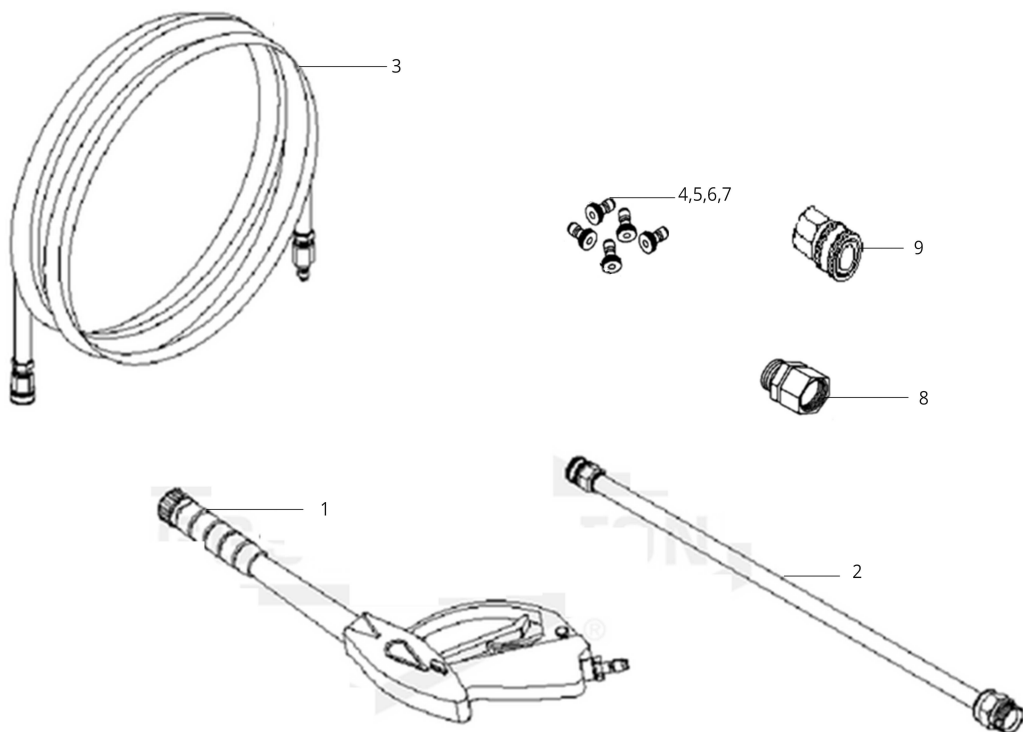

HYUNDAI

POWER PRODUCTS


HPW200

Ref	Description	Part number
1	Gun	HPAC7003
2	Lance	HP20.202.039
3	Hose	HP85.225.229
4	Nozzle Q/C 0 DEG - 030	HP85.201.030
5	Nozzle Q/C 15 DEG - 030	HP85.216.030
6	Nozzle Q/C 40 DEG - 030	HP85.241.030
7	Nozzle Plastic soap Black	HP85.266.401
8	Screw Type 1/4" F fitting	HP85.300.126J
9	Coupling 1/4" QD Female	HP85.300.102J

HYUNDAI

POWER PRODUCTS

HPW200

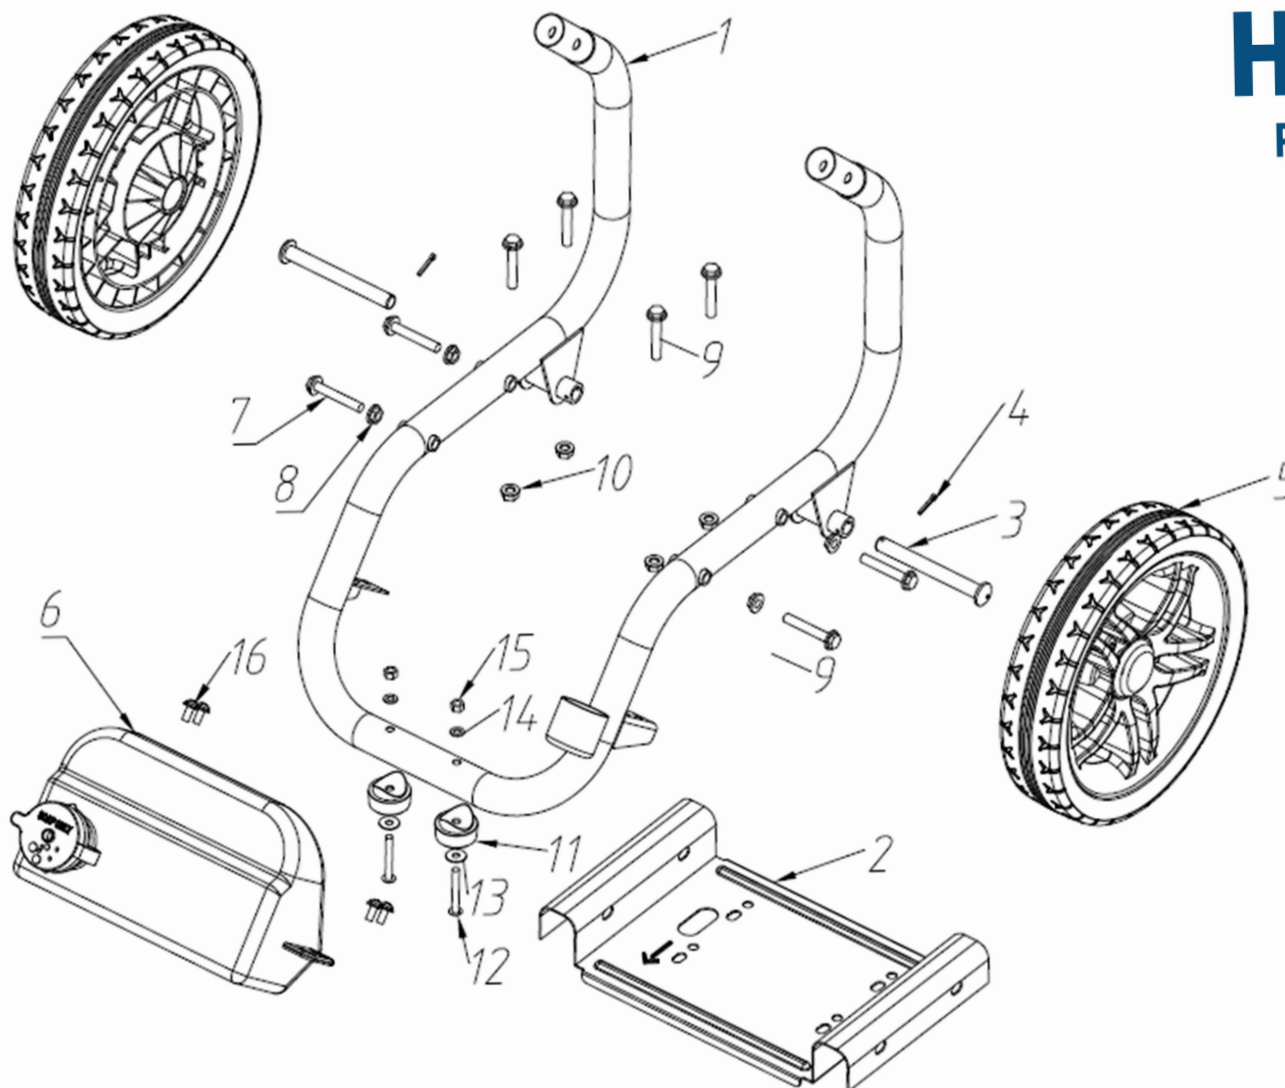


HYUNDAI

POWER PRODUCTS

HPW200

Ref	Description	Part number
1	Welded Frame Base	HP85.600.122HEA-01
2	Frame Base Plate	HP85.600.122HEA-.01.2
3	Frame Axle	HP85.600.122HE-09
4	Frame Pim	HP85.600.122HE-10
5	Frame tire	HP85.600.055
6	Hexagonal Flange M8x50	HP85.600.122HE-11
7	Hexagonal Flange nut	HP85.600.122HE-12
9	Hexagonal flange M8x40	HP85.600.134-11
10	Hexagonal Flange nut	HP85.600.134-12
11	Foot Pad	HP85.600.122HE-15
12	Cross Pan head screw M6x45	HP85.600.147-03.02
13	Extension Gaskte , M6	HP85.600.134-08
14	Gasket,m6	HP85.600.147-03.3
15	M6 self locking nut	HP09.006-002
16	Cross Pan head screw M6x16	HP85.600-147-03.3

HYUNDAI
POWER PRODUCTS
HPW200

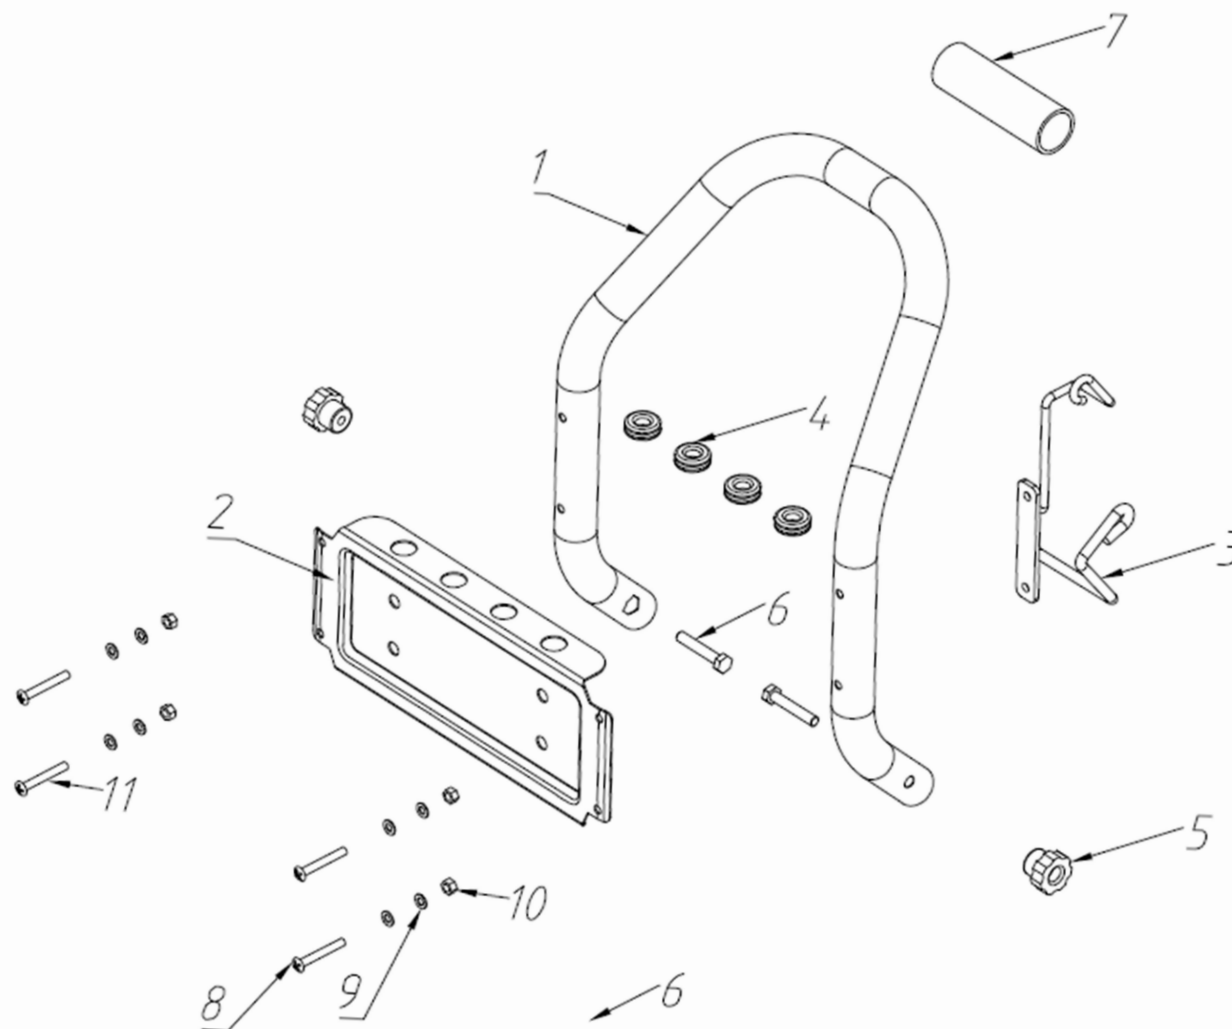

HYUNDAI


POWER PRODUCTS

HPW200

Ref	Description	Part number
1	Handle tubing	HP85.600.122HEA-02
2	Decak plate	HP85.600.122HEA-02.2
3	Gun Hook assy	HP85.600.122HEW-03
4	Handle ruber grip 32MM	HPDP9134
5	Knuckle nut, plastic 60mm	HP85.600.134-10
6	Outer hexagon nut M8x45	HP85.600.134-09
7	handle rubber Grip 32mm Tubing	HP85.600.134-02.2
8	cross pan head screw M6x45	HP85.600.147-03-2
9	Gasket,M6	HP85.600.147-03.7
10	M6 self -locking nut	HP85.600.147-03.7
11	Cross pan head screw M6x40	HPBZ0210


HPW200

FIG.1 CRANKCASE ASSEMBLY (E01)

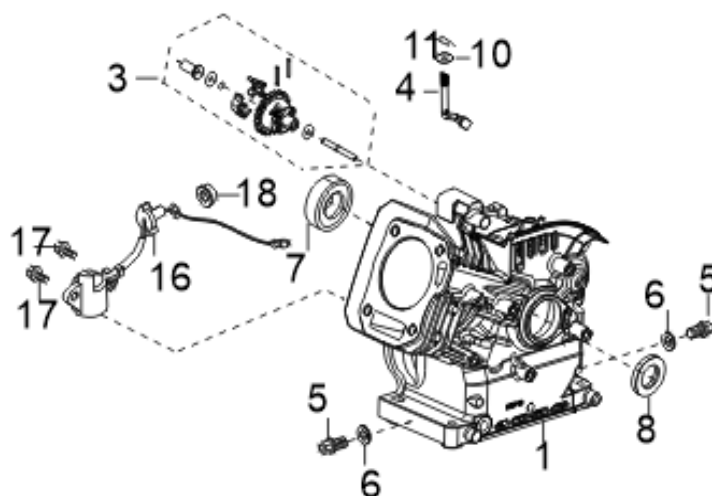


REF.NO.	PART NO	DESCRIPTION	Q'TY
E01-1	11310-Z531220-00A9	CRANKCASE SUBASSEMBLY.	1
E01-3	16400-Z010110-0000	GEAR ASSY, GOVERNOR	1
E01-4	16061-Z010110-0000	ARM, GOVERNOR	1
E01-5	11007-Z010110-0000	BOLT, DRAIN PLUG	2
E01-6	90408-Z010110-0000	WASHER, FLAT	2
E01-7	90548-0205-CL	BEARIN, DEEP GROOVE BALL	1
E01-8	90682-Z300110-0000	SEAL, OIL	1
E01-10	90408-Z010210-0000	WASHER, FLAT	1
E01-11	90501-Z010110-0000	PIN	1
E01-16	37060-Z010120-0000	SENSOR, ENGINE OIL	1
E01-17	90001-0614-01	BOLT	1
E01-18	90305-Z010210-01	NUT	1


FIG.2 CRANKCASE (E02)

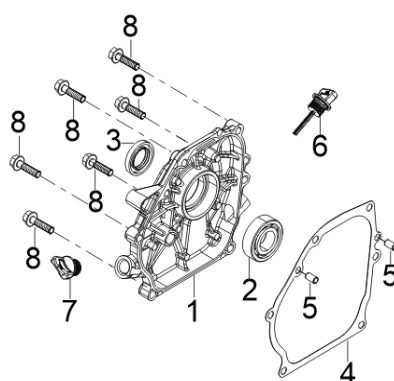


REF.NO.	PART NO	DESCRIPTION	Q'TY
E02-1	11411-Z441010-00A0	COVER, CRANKCASE	1
E02-2	90548-0205-CL	BEARIN, DEEP GROOVE BALL	1
E02-3	90682-Z300110-0000	SEAL, OIL	1
E02-4	11001-Z440110-0000	GASKET, CRANKCASE	1
E02-5	90502-0912-00	PIN	2
E02-6	15010-Z010130-Q500	DIPSTICK SUBASSEMBLY, OIL	1
E02-7	15030-Z010130-Q500	PLUG SUBASSEMBLY, ENGINE OIL	1
E02-8	90001-0832-01	BOLT	6

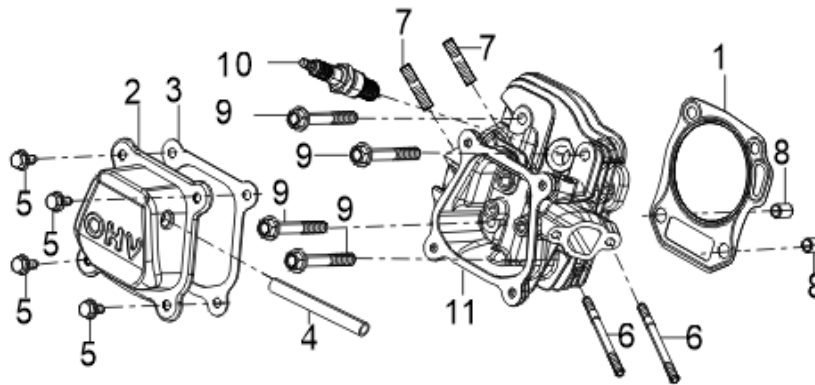FIG.3 CYLINDER HEAD (E03)


REF.NO.	PART NO	DESCRIPTION	Q'TY
E03-1	12131-Z530320-0000	GASKET, CYLINDER HEAD	1
E03-2	12410-Z300120-0000	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	12004-Z010110-0000	GASKET, CYLINDER HEAD COVER	1
E03-4	17004-Z010310-0000	TUBE, BREATHER	1
E03-5	90001-0612-01	BOLT	4
E03-6	90204-Z010310-0000	BOLT	2
E03-7	90203-Z010110-0000	BOLT	2
E03-8	90502-1114-00	PIN	2
E03-9	12003-Z010110-0000	BOLT, CYLINDER HEAD	4
E03-10	30010-Z010210-0000	PLUG, SPARK	1(-)
E03-11	12140-Z810210-00A0	HEAD SUBASSEMBLY, CYLINDER	1

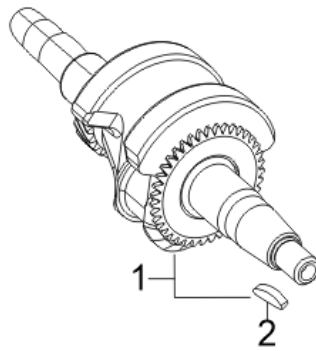FIG.4 CRANKSHAFT (E04)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E04-1	13300-Z530210-0000	CRANKSHAFT ASSY.	1

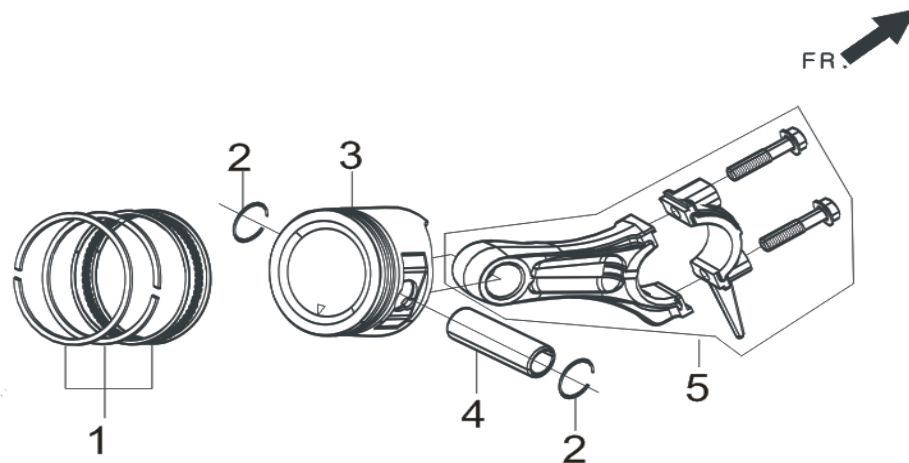
FIG.5 PISTON, RINGS & CONNECTING ROD (E05)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E05-1	13200-Z140210-00A9	RING ASSY, PISTON	1
E05-2	13122-Z010110-0000	CLIP, PISTON PIN	2
E05-3	13111-Z140220-00A9	PISTON	1
E05-4	13121-Z010110-0000	PIN, PISTON	1
E05-5	13010-Z440210-00A9	ROD, CONNECTING	1

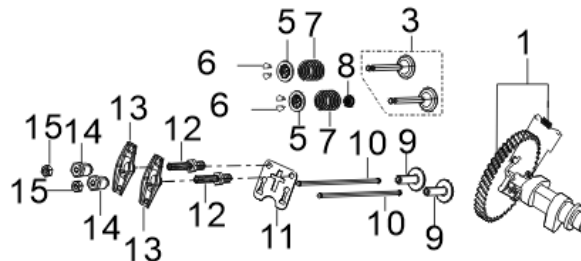FIG.6 VALVE TRAIN & CAMSHAFT (E06)


REF.NO.	PART NO	DESCRIPTION	Q'TY
E06-1	14200-Z530210-0099	CAMSHAFT ASSY.	1
E06-3	12110-Z810120-0099	VALVES SET	1
E06-5	12112-Z810210-0000	SEAT, VALVE SPRING	2
E06-6	12109-Z810110-0000	CLAMP, VALVE LOCK	4
E06-7	12103-Z010110-0000	SPRING, VALVE	2
E06-8	12101-Z810210-0000	GUIDE, SEAL	1
E06-9	14081-Z040110-0000	TAPPET, VALVE	2
E06-10	14071-Z440110-0000	LIFTER, VALVE	2
E06-11	14090-Z010110-0000	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-12	14313-Z010110-0000	BOLT, ROCKER SHAFT	2
E06-13	14311-Z010110-0000	ROCKER, VALVE	2
E06-14	14314-Z010110-0000	NUT, VALVE ADJUSTING	2
E06-15	14312-Z010110-0000	NUT, VALVE LOCK	2

FIG.7 RECOIL STARTER (E07)

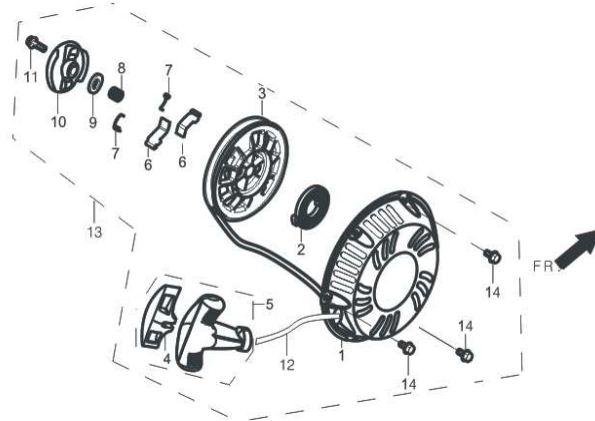


REF.NO.	PART NO	DESCRIPTION	Q'TY
E07-13	28200-Z440110-H600	STARTER ASSY, RECOIL	1
E07-14	90001-0612-03	BOLT	3


FIG.8 SHROUD (E08)

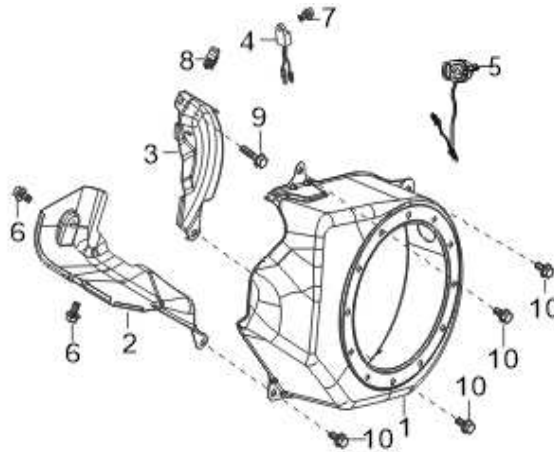


REF.NO.	PART NO	DESCRIPTION	Q'TY
E08-1	28110-Z300320-H600	SHROUD	1
E08-2	19304-Z010610-0000	SHROUD, CYLINDER BODY	1
E08-3	19340-Z010510-0000	SHIELD, LOWER	1
E08-4	37050-Z010210-0000	PROTECTOR, OIL	1
E08-5	35540-Z060140-Q200	SWITCH SUBASSEMBLY, STOP ENGINE	1
E08-6	90001-0610-01	BOLT	2
E08-7	90001-0612-01	BOLT	1
E08-8	90740-Z010110-0000	COLLAR	1
E08-9	90001-0616-01	BOLT	1
E08-10	90001-0612-01	BOLT	4

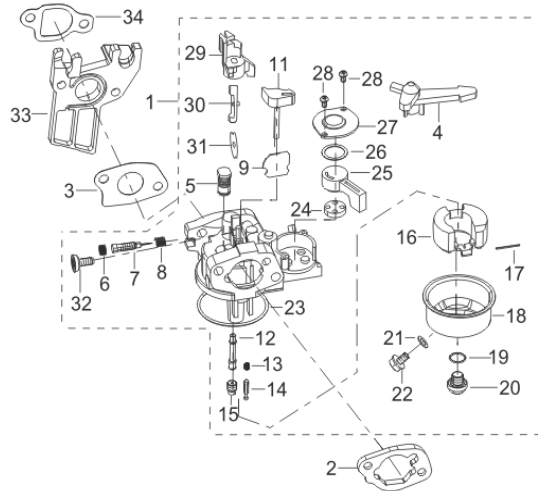FIG.9 CARBURETOR (E09)


REF.NO.	PART NO	DESCRIPTION	Q'TY
E09-1	16100-Z530610-KM09	CARBURETOR ASSY.	1
E09-2	17001-Z010210-0000	GASKET, AIR CLEANER	1
E09-3	16001-Z010110-0000	GASKET, CARBURETOR	1
E09-4	16120-Z530210-0000	HANDLE, CARBURETOR CHOKE	1
E09-5	16165-Z530610-0000	JET, IDLE SPEED	1
E09-6	16163-Z010110-0000	PLUG, END	1
E09-7	16162-Z010110-0000	SCREW, IDLE SPEED MIXED RATIO ADJUSTING	1
E09-8	16167-Z010110-0000	SPRING, IDLE SPEED MIXED RATIO ADJUSTING SCREW	1
E09-9	16231-Z530410-0000	CHOKE	1
E09-11	16528-Z010110-0000	ARM, CHOKE CONTROL	1
E09-12	16105-Z530610-0000	NOZZLE, MAIN	1
E09-13	16223-Z010110-0000	SPRING, FLOAT	1
E09-14	16142-Z010110-0000	VALVE, FILLING OIL NEEDLE	1
E09-15	16161-Z151410-0000	JET, MAIN	1
E09-16	16221-Z010110-0000	FLOAT	1
E09-17	16222-Z010110-0000	PIN, FLOAT	1
E09-18	16771-Z010110-0000	CUP, DEPOSITION	1
E09-19	90681-Z010510-0000	RING, SEAL	1
E09-20	16192-Z010110-0000	BOLT, OIL CUP	1
E09-21	90681-Z030210-0000	RING, SEAL	1
E09-22	16193-Z010110-0000	PLUG, OIL CUP DRAIN	1
E09-23	16112-Z010110-0000	GASKET, FLOAT CHAMBER	1
E09-24	90681-Z530210-0000	RING, SEAL	1
E09-25	16754-Z530210-0000	HANDLE, FUEL COCK	1
E09-26	90405-Z530210-0000		1
E09-27	16753-Z530210-0000	COVER, FUEL COCK	1
E09-28	90256-0308-02		2
E09-29	16184-Z010110-0000	ARM, THROTTLE VALVE CONTROL	1
E09-30	16182-Z010110-0000	SHAFT, THROTTLE VALVE	1
E09-31	16181-Z530410-0000	VALVE, THROTTLE	1
E09-32	16164-Z010110-0000	SCREW, IDLE SPEED ADJUSTING	1
E09-33	16003-Z010110-0000	PLATE, CARBURETOR INSULATOR	1
E09-34	16002-Z050110-0000	GASKET, CARBURETOR INSULATOR	1

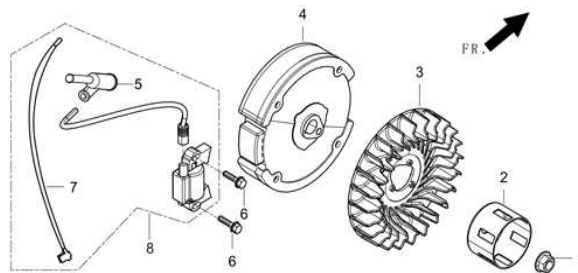FIG.13 FLYWHEEL, IGNITION COIL (E10)


REF.NO.	PART NO	DESCRIPTION	Q'TY
E10-1	13501-Z010110-0000	NUT, FLYWHEEL	1
E10-2	28002-Z010310-0000	PULLEY,STARTER	1
E10-3	19352-Z440210-0000	IMPELLER	1
E10-4	13510-Z440410-0000	FLYWHEEL SUBASSEMBLY	1
E10-6	90001-0625-01	BOLT	2
E10-8	30400-Z540110-0000	COIL, IGNITION	1

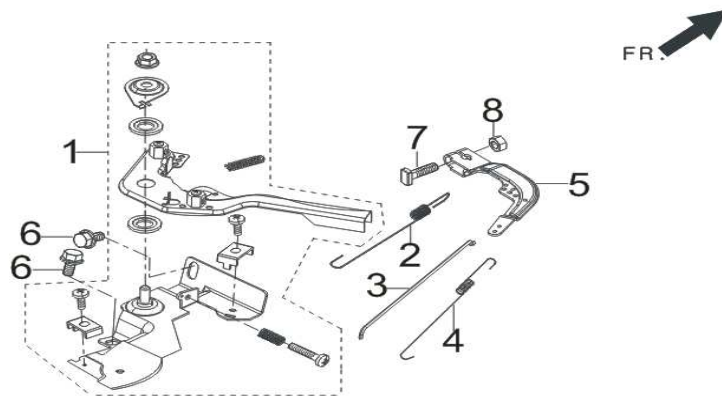FIG.14 THROTTLE CONTROL ASSEMBLY (E11)


REF.NO.	PART NO	DESCRIPTION	Q'TY
E11-1	16520-Z440120-0000	CONTROL ASSY, THROTTLE	1
E11-2	16063-Z050510-0000	SPRING, GOVERNOR	1
E11-3	16062-Z010110-0000	ROD, GOVERNEOR	1
E11-4	16012-Z010110-0000	SPRING, THROTTLE VALVE RETURNING	1
E11-5	16070-Z010110-0000	SUPPORT SUBASSEMBLY, GOVERNOR	1
E11-6	90001-0610-01	BOLT	2
E11-7	16072-Z010110-0000	BOLT, GOVERNOR SUPPORT	1
E11-8	90305-0600-31	NUT	1

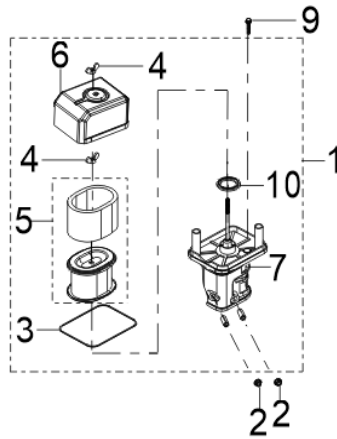FIG.10 AIR CLEANER (F01)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F01-1	17100-Z010210-0000	CLEANER, AIR	1
F01-2	90305-0600-31	NUT	2
F01-3	90681-Z010410-0000	RING, SEAL	1
F01-4	90312-0600-33		2
F01-5	17150-Z010110-0000	ELEMENT SUBASSEMBLY, AIR CLEANER	1
F01-6	17104-Z010210-0000	COVER, AIR CLEANER CASE	1
F01-7	17140-Z010210-0000	ELBOW SUBASSEMBLY, AIR CLEANER	1
F01-9	90001-0614-01	BOLT	1
F01-10	17116-Z010210-0000	GASKET, ELEMENT SUPPORTING	1

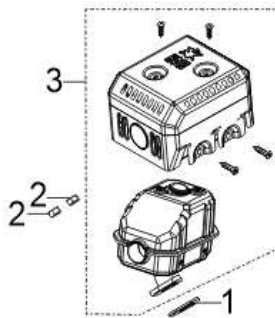FIG.11 MUFFLER (F02)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F02-1	18001-Z440110-00A0	GASKET, EXHAUST OUTLET	1
F02-2	90303-0800-31	NUT	2
F02-3	18100-Z012410-H300	MUFFLER ASSY.	1

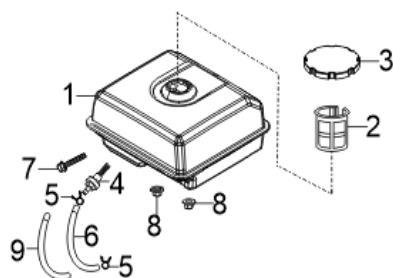FIG.12 FUEL TANK (F03)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F03-1	16620-Z440410-H60P	TANK, FUEL	1
F03-2	16652-Z010710-0000	STRAINER, FUEL	1
F03-3	16730-Z440810-LK00	COVER, FUEL TANK	1
F03-4	16680-Z010110-0000	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
F03-5	90740-Z010210-0000	COLLAR	2
F03-6	90686-Z010710-0000	TUBE, FUEL	1
F03-7	90001-0630-01	BOLT	1
F03-8	90305-0600-31	NUT	2
F03-9	30431-Z010110-0000	JACKET, RUBBER	1