



HT230H



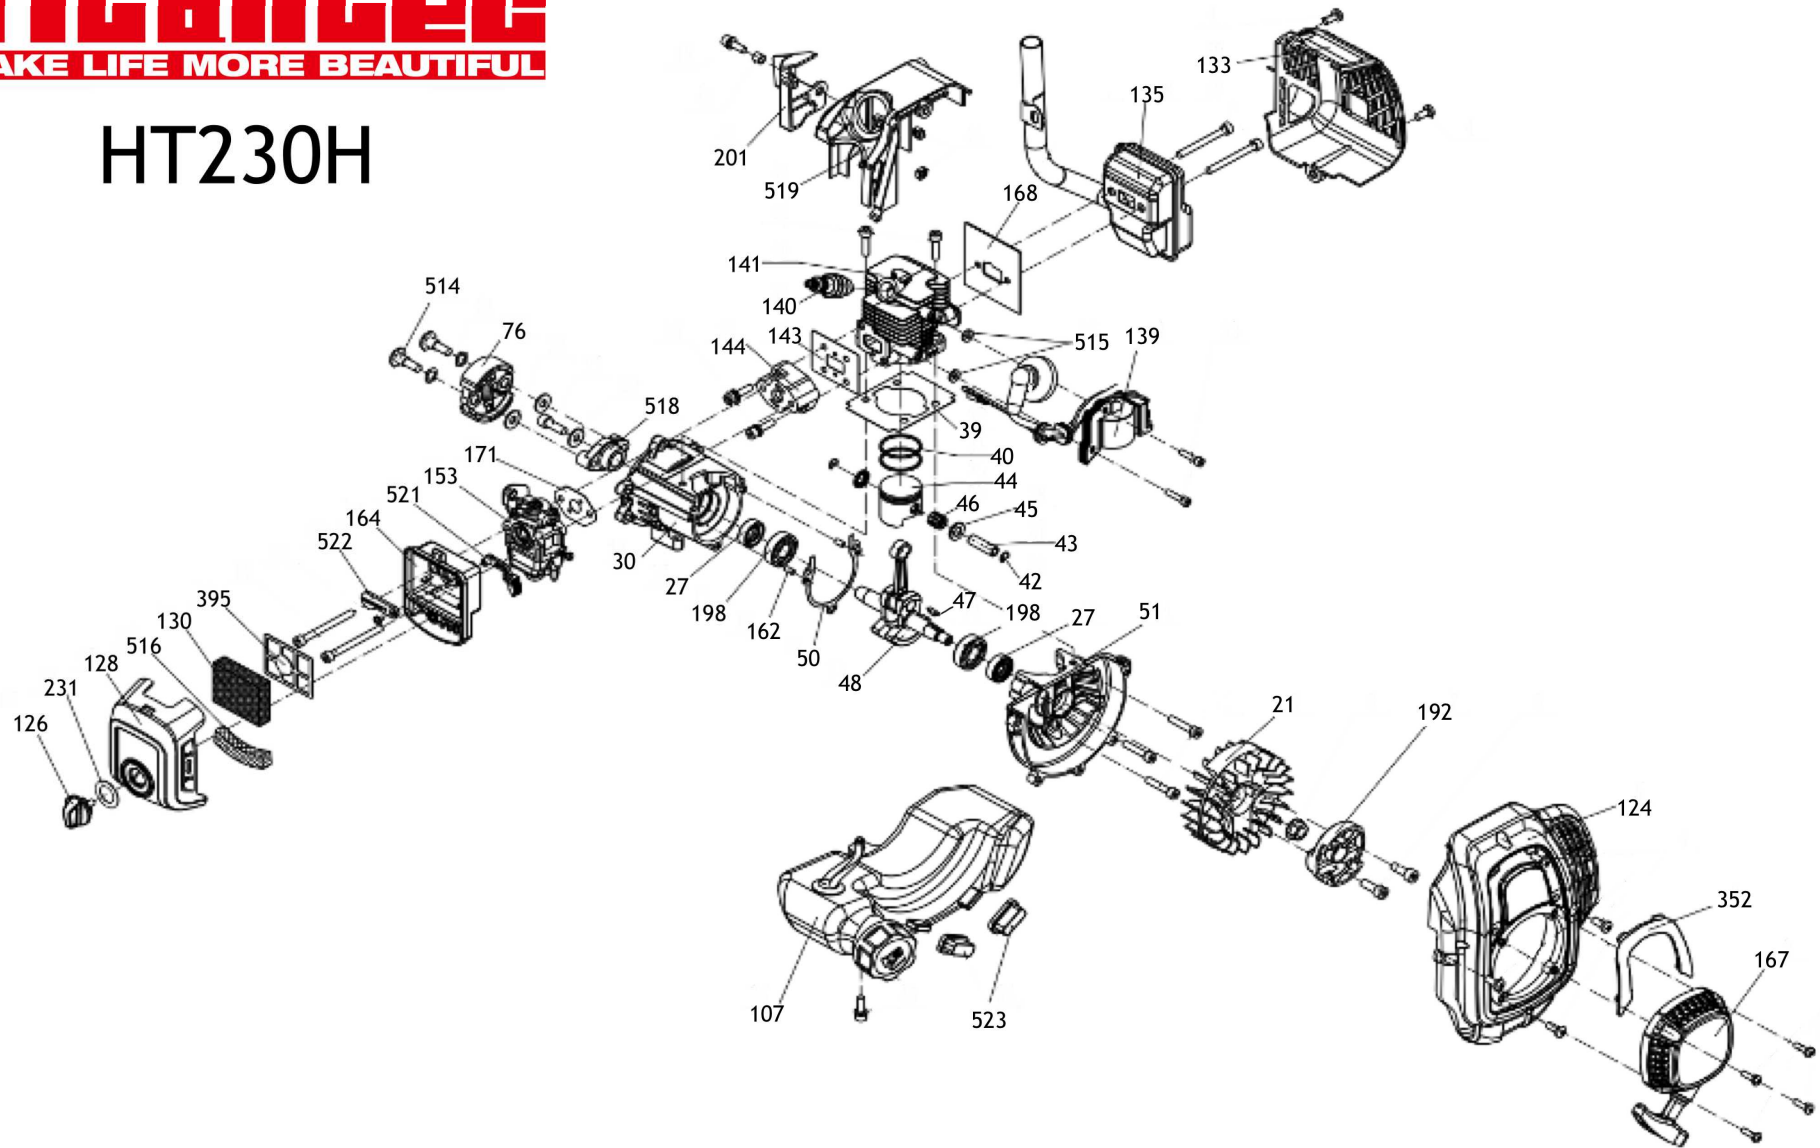

HT230H

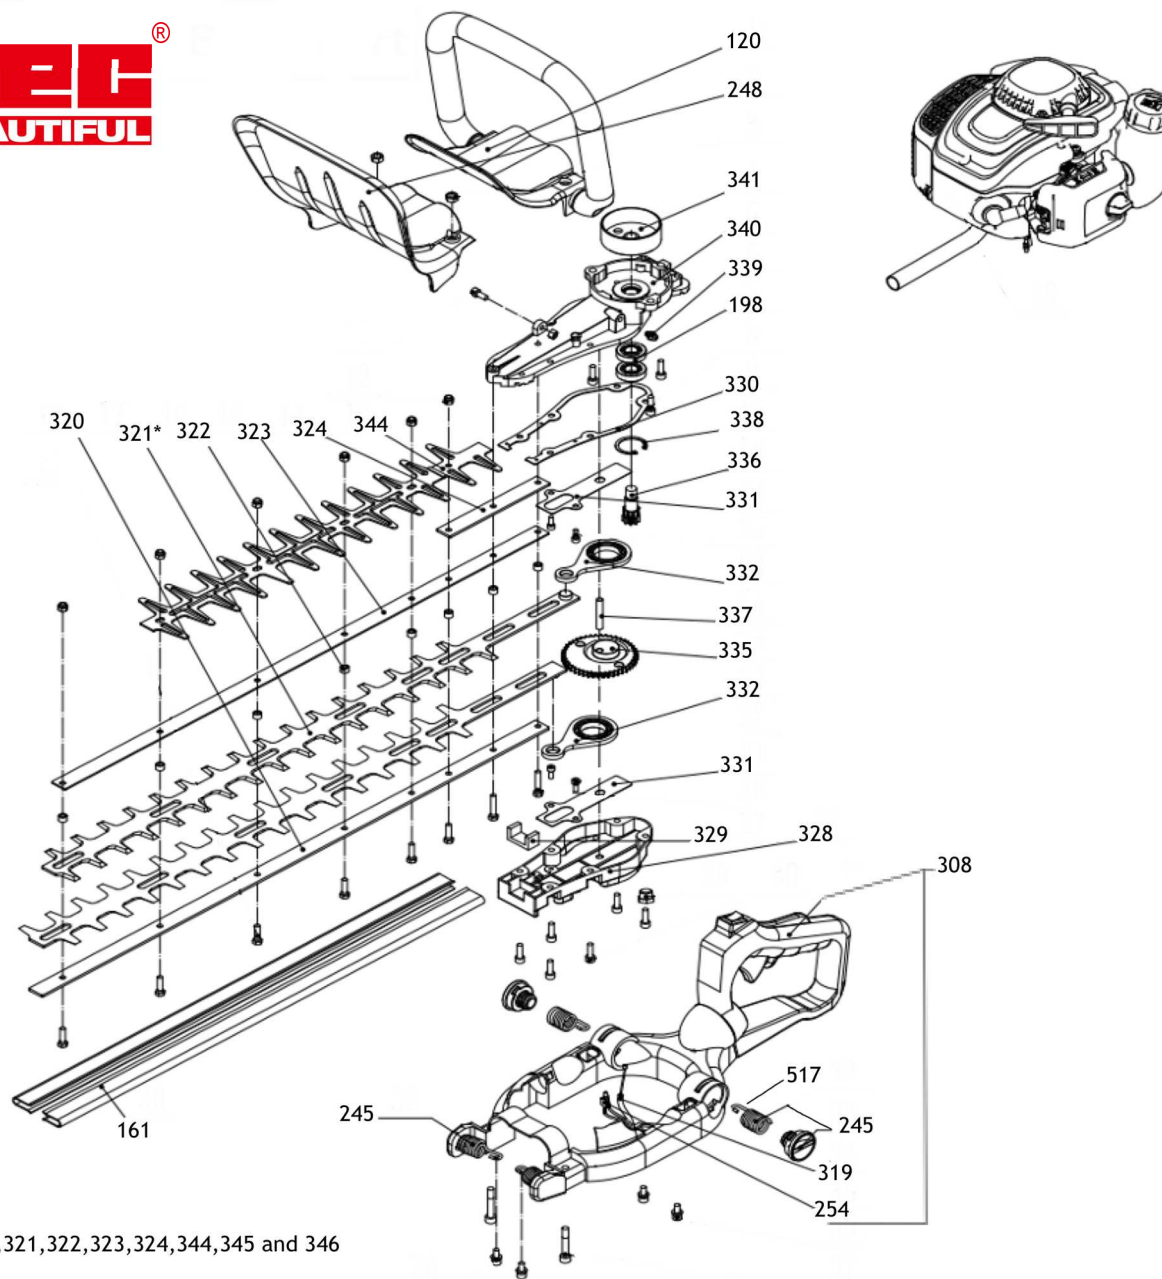

Includes, 320,321,322,323,324,344,345 and 346

HT230H

Ref	Description	Part number
21	Fywheel	TT02113
27	oil seal 12x22x7	TT02701
30	Left Crankcase	TT03012
39	Gasket, Cylinder	TT03902
40	Piston Ring	TT04013
42	Snap Ring, Piston Pin	TT04202
43	Piston Pin	TT04313
44	Piston	TT04413
45	anti friction pad	TT04506
46	Needle bearing	TT04613
47	Key	TT04702
48	Crankshaft	TT04813
50	Gasket, Crankcase	TT05011
51	Right Crankcase	TT05112
76	Clutch	TT07608
107	fuel tank	TT10709
120	Handle	TT12006
124	Cover, Cylinder	TT12409
126	Knob	TT12607
128	Cover Filter	TT12810
130	element	TT13009
133	cover muffler	TT13307
135	muffler	TT13508
139	coil	TT13913
140	spark plug BM6A	TT14001
141	cylinder	TT14113
143	gasket inlet pipe	TT14308
144	insulator	TT14409
153	carb	TT15313
161	cover	TT16102
162	Pin 4x8	TT16203
164	air filter seat	TT16407
167	starter assy	TT16708
168	gasket muffler	TT16807
171	gasket carburetor	TT17102
192	pulley	TT19205
198	Bearing 6001Z	TT19802

Ref	Description	Part number
201	windshield Pad	TT20102
231	sealing ring	TT23102
245	spring seat	TT24502
248	Protective plate	TT24803
254	Flameout cable	TT25403
308	Down cover handle	TT30802
319	throttle cable	TT31902
320	down layer - thin	TT32001
321	blade	TT32101
322	wear rail	TT32201
323	thick steel strip	TT32301
324	layer aluminium	TT32401
328	cover gearcase	TT32801
329	wool felt	TT32901
330	gasket gearcase	TT33001
331	washer	TT33101
332	connecting rod	TT33201
335	eccentric gear	TT33501
336	drive gear	TT33602
337	axle pin	TT33702
338	snap ring 28	TT33801
339	grease fitting	TT33901
340	gearcase	TT34001
341	drum	TT34101
344	blade mouthguard	TT34401
352	Decorated frame	TT35202
395	anti spray plate	TT39502
514	step bolt	TT51401
515	Insulation pad	TT51501
516	Coarse spong filter	TT51601
517	anti vibration spring	TT51701
518	Clutch seat	TT51801
519	Cover cylinder	TT51901
521	Throttle lever	TT52101
522	throttle baffle	TT52201
523	Damper fuel fank	TT52301