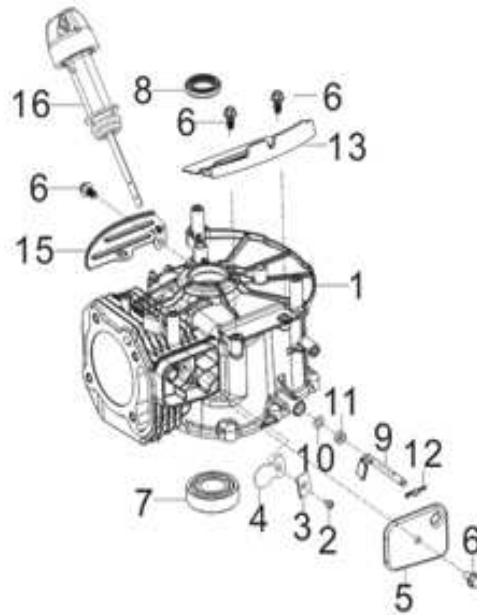



H200VC ENGINE

FIG.1 CRANKCASE.(E01)




REF.NO	PART NO	DESCRIPTION	Q'TY
E01-1	11310-Z3F0113-00A1	CRANKCASE SUBASSEMBLY.	1
E01-2	90103-0410-51A0	CROSS-RECESSED SMALL PAN HEAD SCREW	1
E01-3	11337-Z2P0110-00A0	BREATH SHEET STOP PLATE	1
E01-4	11321-Z3F0110-00A0	BREATH SHEET	1
E01-5	11333-Z3F0110-00A0	PLATE, BREATH GROOVE COVER	1
E01-6	90007-0612-A1A0	BOLT	4
E01-7	90548-0205-CLA0	DEEP GROOVE BALL BEARING	1
E01-8	90682-Z020410-00A0	SEAL, OIL	1
E01-9	16061-Z3F0110-00A0	ARM, GOVERNOR	1
E01-10	90408-Z010210-00A0	FLAT WASHER	1
E01-11	90682-Z030210-00A0	SEAL, OIL	1
E01-12	90501-Z010110-00A0	COTTER PIN	1
E01-13	19340-Z3F0310-00A0	SHIELD,LOWER	1
E01-15	19340-Z3F0210-00A0	SHIELD,LOWER	1
E01-16	15010-Z3F0111-Q5B0	DIPSTICK SUBASSEMBLY, OIL	1

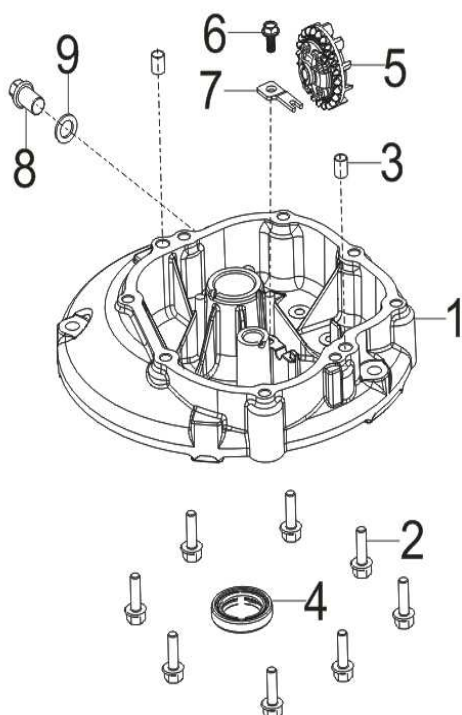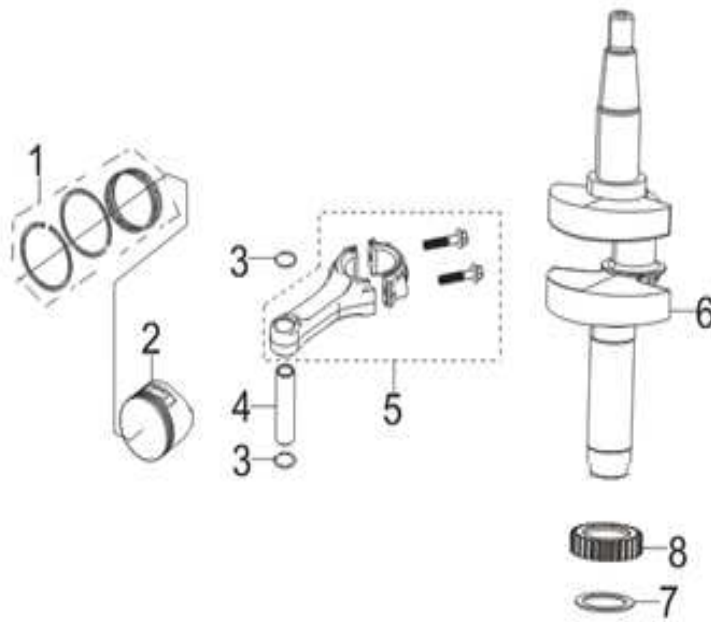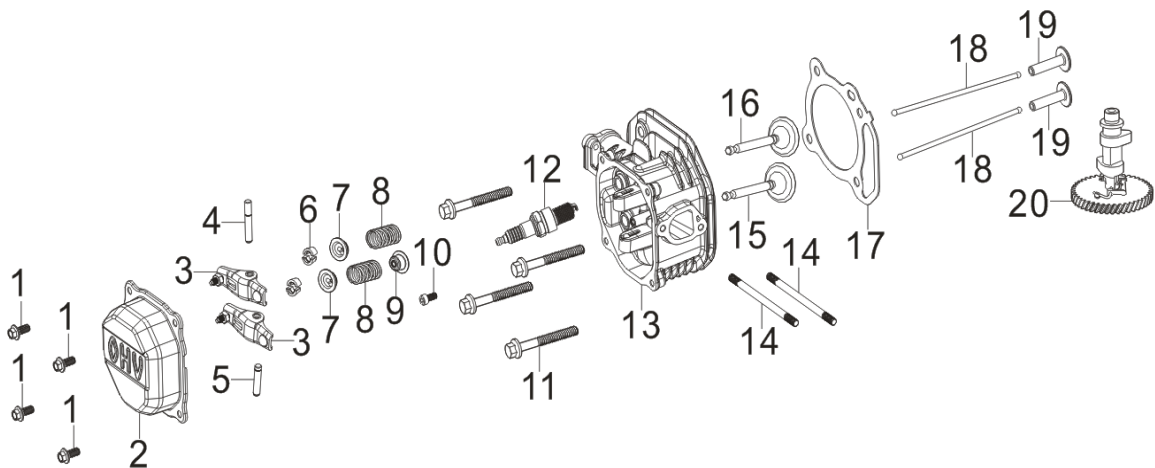
FIG.3 COVER SUBASSEMBLY, CRANKCASE / GEAR ASSY, GOVERNOR(E03)



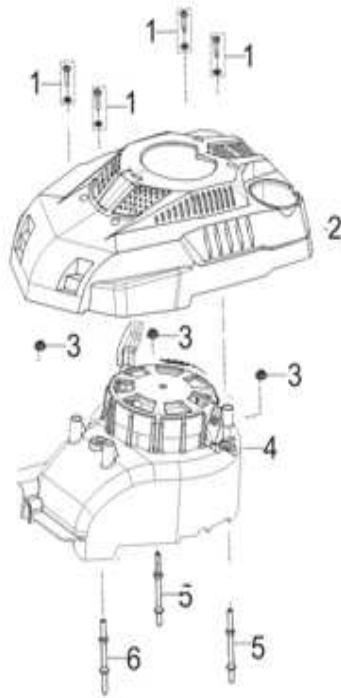
REF.NO	PART NO	DESCRIPTION	Q'TY
E03-1	11411-Z3F0211-00A0	COVER, CRANKCASE	1
E03-2	90007-0622-A1A0	BOLT	8
E03-3	90502-0810-00A0	POSITION PIN - TYPE A	2
E03-4	90682-Z030120-00A0	SEAL, OIL	1
E03-5	16400-Z3F0110-00A0	GEAR ASSY, GOVERNOR	1
E03-6	90007-0612-A1A0	BOLT	1
E03-7	16013-Z030120-00A0	PLATE, GOVERNOR SPINDLE COMPRESSION	1
E03-8	11007-Z010110-00A0	BOLT, DRAIN PLUG	1
E03-9	90408-Z010110-00A0	FLAT WASHER	1

FIG.4 ROD,CRANKSHAFT CONNETING (E04)

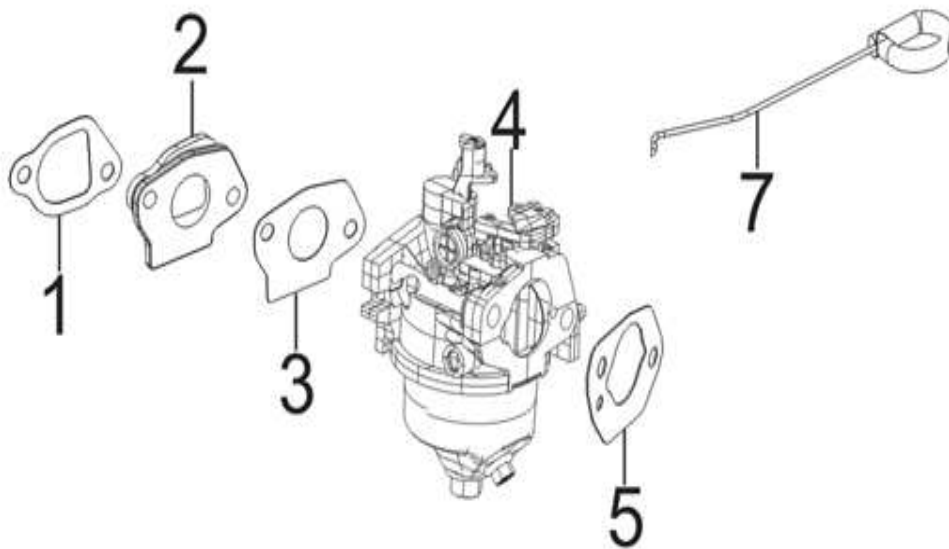
REF.NO	PART NO	DESCRIPTION	Q'TY
E04-1	13200-Z3F0110-00A0	RING ASSY, PISTON	1
E04-2	13111-Z3F0110-00A0	PISTON	1
E04-3	13122-Z350110-00A0	CLIP, PISTON PIN	2
E04-4	13121-Z810110-00A0	PIN, PISTON	1
E04-5	13010-Z3F0110-00A0	ROD, CONNECTING	1
E04-6	13300-Z3F0410-00A0	CRANKSHAFT ASSY.	1
E04-7	90408-Z030210-00A0	FLAT WASHER	1
E04-8	14014-Z2R0110-00A0	GEAR, TIMING DRIVE	1

FIG.5 TRAIN,VALVE / CAMSHAFT SUBASSEMBLY (E05)

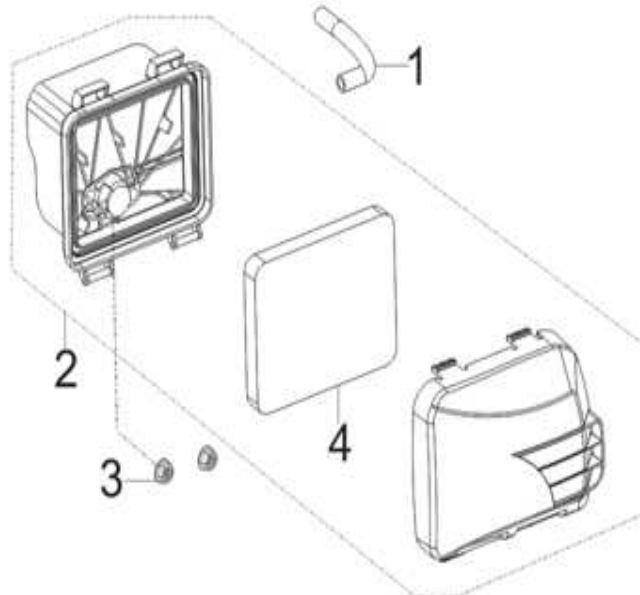
REF.NO	PART NO	DESCRIPTION	Q'TY
E05-1	90007-0612-A1A0	BOLT	4
E05-2	12411-Z3F0110-00A0	COVER, CYLINDER HEAD	1
E05-3	14310-Z3F0110-00A0	ROCKER SUBASSEMBLY, VALVE	2
E05-4	14318-Z3F0110-00A0	SHAFT SUBASSEMBLY, ROCKER	1
E05-5	14318-Z950110-00A0	SHAFT SUBASSEMBLY, ROCKER	1
E05-6	12109-Z810110-00A0	CLAMP, VALVE LOCK	4
E05-7	12112-Z810210-00A0	SEAT, VALVE SPRING	2
E05-8	12103-Z010110-00A0	SPRING, VALVE	2
E05-9	12101-Z810210-00A0	GUIDE, SEAL	1
E05-10	90102-0512-A1A0	HEXAGON SOCKET HEAD CAP SCREW	1
E05-11	12003-Z3F0110-0100	CYLINDER HEAD BOLT	4
E05-12	30010-Z050110-00A0	PLUG, SPARK	1
E05-13	12140-Z3F0110-00A0	HEAD SUBASSEMBLY, CYLINDER	1
E05-14	90204-Z020310-00A0	STUD BOLT	2
E05-15	12111-Z3F0110-00A0	VALVE, INTAKE	1
E05-16	12111-Z950110-00A0	VALVE, INTAKE	1
E05-17	12131-Z3F0110-00A0	GASKET, CYLINDER HEAD	1
E05-18	14071-Z3F0110-00A0	LIFTER, VALVE	2
E05-19	14081-Z2R0110-00A0	TAPPET, VALVE	2
E05-20	14200-Z3F0210-00A0	CAMSHAFT ASSY.	1

FIG.6 STARTER,RECOIL (E06)

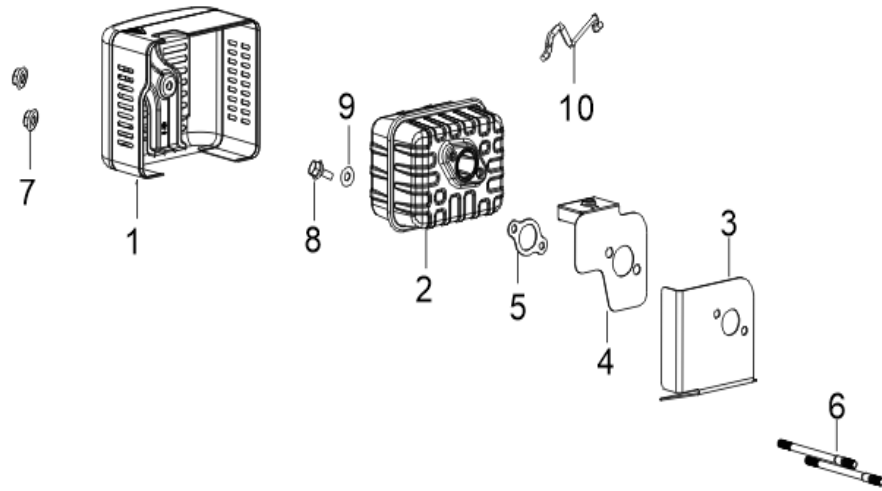
REF.NO	PART NO	DESCRIPTION	Q'TY
E06-1	90254-0520-51A0	CROSS-RECESSED SMALL PAN HEAD SCREW, SPRING WASHER AND FLAT WASHER ASSEMBLY	4
E06-2	80001-Z3F0210-BTA0	HOUSING, ENGINE	1
E06-3	90305-0600-31A0	HEXAGON NUT WITH FLANGE	3
E06-4	28200-Z3F0312-Q200	STARTER ASSY, RECOIL	1
E06-5	28001-Z3F0110-0100	DOUBLE HEAD SUPPORT BOLT	2
E06-6	28001-Z030220-00A0	DOUBLE HEAD SUPPORT BOLT	1

FIG.8 CARBURETOR ASSY. (E08)

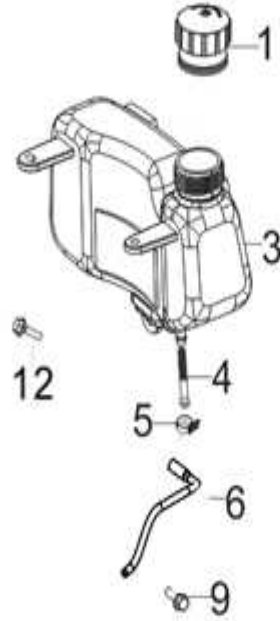
REF.NO	PART NO	DESCRIPTION	Q'TY
E08-1	16004-Z3F0110-00A0	GASKET, INSULATOR PLATE	1
E08-2	16003-Z3F0110-00A0	PLATE, CARBURETOR INSULATOR	2
E08-3	16001-Z3F0210-00A0	CARBURETOR SEAL GASKET	3
E08-4	16100-Z3F0810-00M0	CARBURETOR ASSY.	1
E08-5	17001-Z2P0110-00A0	AIR CLEANER SEAL GASKET	1
E08-7	16123-Z3F0310-00A0	CHOKE PULL ROD	1

FIG.9 CLEANER, AIR (E09)

REF.NO	PART NO	DESCRIPTION	Q'TY
E09-1	17004-Z3F0111-00A0	TUBE, BREATHER	1
E09-2	17100-Z3F0310-00A0	AIR CLEANER	1
E09-3	90305-0600-31A0	HEXAGON NUT WITH FLANGE	2


FIG.10 MUFFLER (E10)

REF.NO	PART NO	DESCRIPTION	Q'TY
E10-1	18130-Z3F0311-H7A0	MUFFLER OUTER COVER	1
E10-2	18100-Z3F0110-00A1	MUFFLER ASSY.	1
E10-3	18001-Z3F0110-00A0	GASKET, EXHAUST OUTLET	1
E10-4	16260-Z3F0111-00A0	MECHANICAL,TEMPERATURE CONTROL	1
E10-5	18001-Z350110-00A0	GASKET, EXHAUST OUTLET	1
E10-6	90204-Z3F0110-0100	STUD BOLT	2
E10-7	90310-0600-31A0	TYPE 2 ALL METAL HEXAGON LOCK NUT WITH FLANGE	2
E10-8	90007-0618-A1A0	BOLT	1
E10-9	90408-U060110-0000	FLAT WASHER - GRADE A	1
E10-10	16123-Z3F0310-00A0	CHOKE PULL ROD	1

FIG.11 TANK, FUEL (E11)


REF.NO	PART NO	DESCRIPTION	Q'TY
E11-1	16730-Z350110-00D0	COVER, FUEL TANK	1
E11-3	16620-Z3F0111-00M1	FUEL TANK	1
E11-4	16652-Z030110-00A0	STRAINER, FUEL	1
E11-5	90685-1000-01A0	PIPE CLAMP	1
E11-6	90686-Z3F0510-00M1	TUBE, FUEL	1
E11-9	90007-0612-A1A0	BOLT	1
E11-11	90685-0700-01A0	PIPE CLAMP	1
E11-12	90007-0630-A1A0	BOLT	1

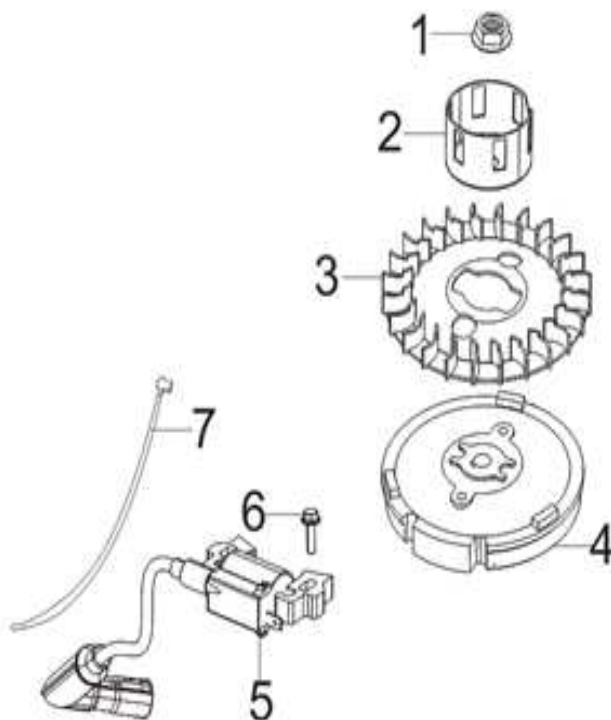FIG.12 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E12)



REF.NO	PART NO	DESCRIPTION	Q'TY
E12-1	13501-Z010110-00A0	NUT, FLYWHEEL	1
E12-2	28002-Z3F0110-0100	PULLEY,STARTER	1
E12-3	19352-Z2R0111-00A0	IMPELLER	1
E12-4	13510-Z3F0110-00A0	FLYWHEEL SUBASSEMBLY	1
E12-5	30400-Z3F0210-0000	COIL, IGNITION	1
E12-6	90007-0630-A1A0	BOLT	1
E12-7	35191-Z3F0210-0000	MICROSWITCH WIRING HARNESS	1

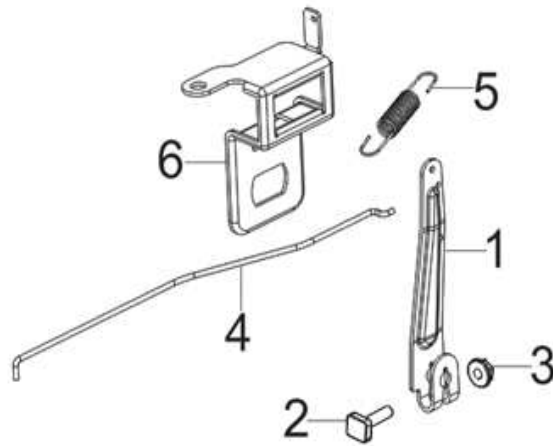FIG.13 CONTROL ASSY, THROTTLE (E13)



REF.NO	PART NO	DESCRIPTION	Q'TY
E13-1	16070-Z3F0110-00A0	GOVERNOR BRACKET SUBASSEMBLY	1
E13-2	16072-Z010110-00A0	BOLT, GOVERNOR SUPPORT	1
E13-3	90305-0600-31A0	HEXAGON NUT WITH FLANGE	1
E13-4	16062-Z3F0210-00A0	ROD, GOVERNEOR	1
E13-5	16063-Z3F0610-00A0	SPRING, GOVERNOR	1
E13-6	16520-Z3F0511-01A0	CONTROL ASSY, THROTTLE	1